



MATERIALS



Isacord Thread Colors

0250 Lemon Frost

0771 Rattan

1755 Hyacinth

2504 Plum

3040 Lavender

3761 Winter Sky

3810 Laguna

4174 Charcoal

5740 Mint

Note: One spool of 1000 meter thread is adequate for the project unless otherwise noted.

MATERIALS



Stabilizers

- OESD StabilStick TearAway
- OESD Applique Fuse and Fix
- OESD Fuse and Seal

Fabrics/Textiles

- OESD Start Here Greeting Cards, size A7 (5" x 7")
- OESD Start Here Greeting Cards, size A6 (4.5" x 6.25")
- · Quilter's cotton various colors

Notion & Tools

- OESD Grippy GRID
- OESD Perfect Embroidery Press Cloth
- Embroidery Needle Sharp 75/11

Isacord Thread Colors

- Per the thread chart
- Match bobbin thread to top thread

SUMMARY



Size A7 Cards Completed Size: 5" x 7"

PK10044-01



Requires 1 Design

PK10044-02



Requires 1 Design

PK10044-03



Requires 1 Design

Size A6 Cards Completed Size: 4.5" x 6.25"

PK10044-04



Requires 1 Design

PK10044-05



Requires 1 Design




General Instructions

The greeting card instructions included in the collection are general instructions for all the greeting card designs. For demonstration purposes, a sample design that best demonstrates the technique is shown. Fabric and thread requirements will vary by design, consult the templates at the end of the instructions for specific size requirements. The sample design is 12959-01.

Note: Some thread colors in instructions have been changed or digitally enhanced for better visibility.


Step 1

- Print the mirrored version of the templates (at 100% scale or 1:1 ratio) onto the paper side of Applique Fuse and Fix.
- Cut approximately 1/4" 1/2" outside the printed applique templates.

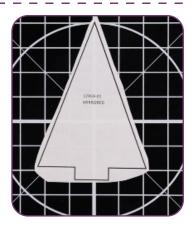

Step 2

- Cut the applique fabric 1/4"-1/2" larger than the applique templates.
- Fuse the trimmed templates to the back of the applique fabric with the paper side of the printed template up.
- Hold the iron on the template for 10-15 seconds for a secure fuse.

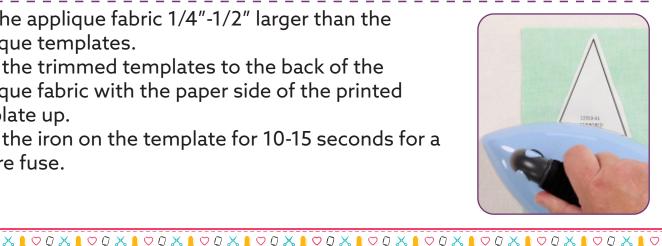



Step 3

- Trim the applique fabric on the edge of the black outline.
- Set aside.



Step 4

 Hoop one layer of StabilStick TearAway paper (shiny) side up.



Step 5

 Score and remove the paper to reveal the adhesive surface.





Step 6

- · Load selected design into the machine.
- Example design is 12959-01.
- Thread the machine per the thread chart.
- Place the hoop on the machine.
- Stitch Machine Step 1, Card Placement Guide.




Step 7

- Remove the hoop from the machine, but NOT the project from the hoop.
- Place the hoop on a flat surface.
- Place the front of the card face up within the placement stitch, lining up all edges.
- Gently finger press the card to secure to the adhesive surface.



Step 8

- Return the hoop to the machine.
- Stitch Machine Step 2, Fabric Placement Stitch.

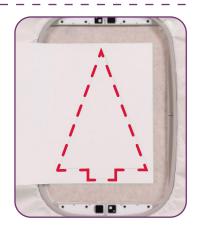



Step 9

- Remove the hoop from the machine, but NOT the project from the hoop.
- Place the hoop on a flat surface.
- On the back of the applique fabric, score and remove the paper backing to reveal the adhesive surface.
- Place the applique fabric within the placement stitching.
- Finger press to secure.
 Note: Applique Fuse and Fix is repositionable.



Step 10

- Return the hoop to the machine.
- Stitch Machine Step 3, Fabric Tackdown.



Step 11

• Return the hoop to the machine and stitch the remaining steps per the thread chart.





Step 12

- When the design is complete, remove the project from the hoop.
- Place the card face down and fold the stabilizer towards the card. Carefully cut the stabilizer away, close to the stitching.

Note: Cutting away the excess tearaway stabilizer will prevent creasing and bending the cardstock.




ASSEMBLY



Step 13


- Cut coordinating cardstock paper (or scrapbook paper) slightly smaller than the front of the card.
- Cut a piece of Fuse and Seal to fit.
- Following the package instructions, with a medium-warm iron, press the Fuse and Seal to the wrong side of the cardstock (scrapbook paper).
- Let cool.

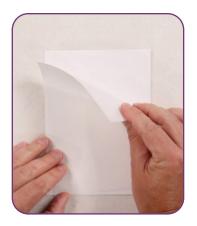



Step 14

Remove paper from Fuse and Seal, line up cardstock (scrapbook paper) over the backside of the card, and press to fuse.

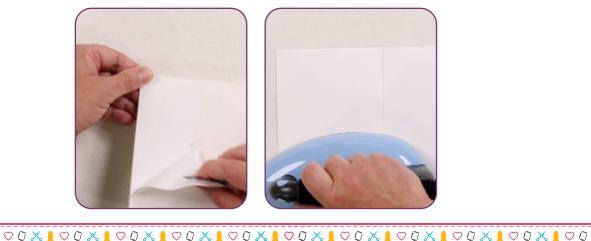



ASSEMBLY



Step 15

The card is complete. Enjoy!




PRINTING INSTRUCTIONS




ATTENTION

When printing this document, any page scaling or page fitting options in your print dialog box must be turned OFF or set to NONE so that your files will print out at their actual size. Images not printed at actual size will not function as intended.

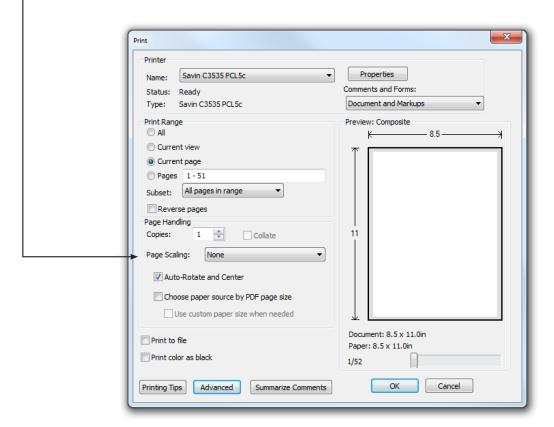

TO SAVE PAPER

 Only print the desired image by navigating to the image's page, go to File > Print and select "Current page" in the print dialog box. Repeat for each desired image.



APPLIQUE PATTERNS



PK10044-01

Print at 100%. No scaling. This box measures 1"x 1". Use the box as an accuracy guide when printing templates.

PK10044-02

PK10044-03

PK10044-04

PK10044-05

MIRRORED PATTERNS O



PK10044-01 Mirrored Print at 100%. No scaling. This box measures 1"x 1". Use the box as an accuracy guide when printing templates.

PK10044-02 Mirrored PK10044-03 Mirrored

PK10044-04 Mirrored PK10044-05 Mirrored